

Bluetooth module installation

操作步骤 User Guide



By Allen , January 17,2022

一. Installation requirements:

1. The APEX printer.
2. Bluetooth module.
3. Phillips screwdriver.

4. The printer must be turned off, power and cable for installation


二. Installation operation:

1. Remove the bottom middle screw.



Note: (Remove only the middle screws)


2. Locate the screw hole for the Bluetooth mod

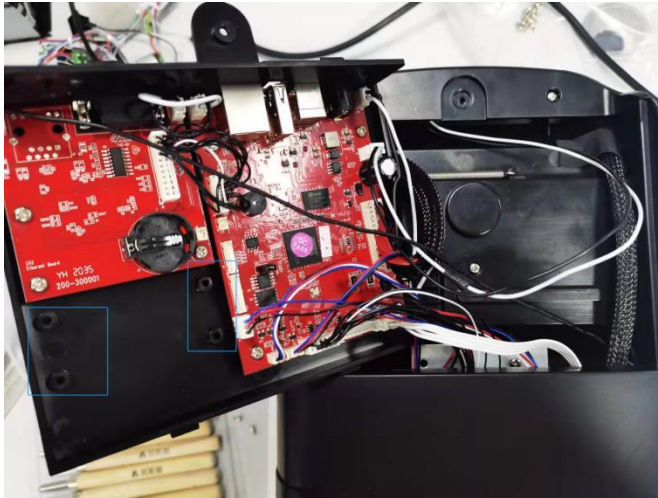

3. Take out the Bluetooth module and calibrate the position of the four screw holes. (Note: front and back of Bluetooth module) and install four screws as shown below:



4. Connect the line as shown in the figure below

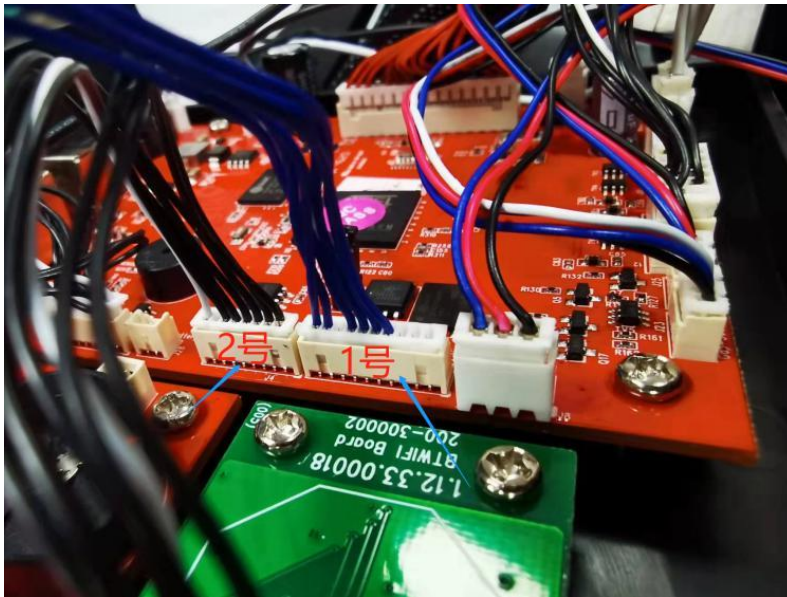

Note: (Blue line connects No.1 interface, black and white line connects no. 2 interface)

5. Install the motherboard shell of the machine, and install from behind the motherboard shell. **Note: (Do not press any line when installing the motherboard housing) as shown below:**



Note (press down in place and install screws) below:




三. Check that the printer Bluetooth module was successfully installed

1. The printer is powered on, the USB is connected to the computer, and turn on the printer switch.
2. Open the PrinterUtility software to read the printer information in the following figure:



3. After reading, the Bluetooth name and PIN code will be displayed, and the Bluetooth module is successfully

installed in the figure below:

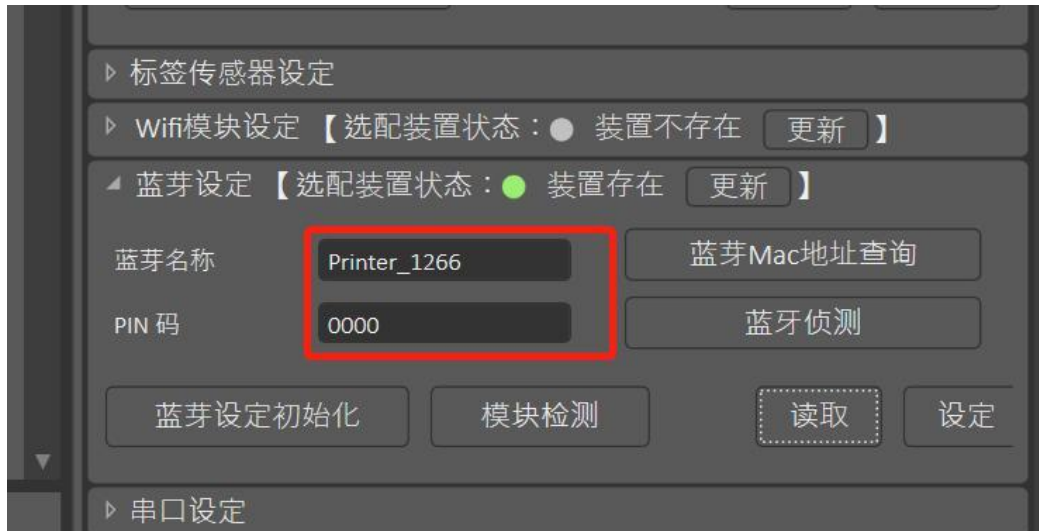

4. End of the A p e x Bluetooth module installation process.**thanks !**